



Partnered for your convenience.

Alexa Voice Commands for the Comfort Sync A3

1. Set your device to a specific temperature:
 - "Alexa, set (thermostat name) to (75) degrees"
 - "Alexa, set (thermostat name) temperature to (75)"
 - "Alexa, set (thermostat name) to (75)"
 - "Alexa, change temperature to (75)" Alexa will ask you to confirm which device, just say your thermostat's name.
 - "Alexa, turn temperature to (75)" Alexa will ask you to confirm which device, just say your thermostat's name.
2. Turn UP the temperature a set amount:
 - "Alexa, increase (thermostat name) by (3) degrees"
 - "Alexa, increase (thermostat name) temperature by (3) degrees"
 - "Alexa, raise (thermostat name) by (3) degrees"
 - "Alexa, heat up (thermostat name) by (3) degrees"
3. Turn UP the temperature by 2 degrees:
 - "Alexa, increase (thermostat name) temperature"
 - "Alexa, heat up (thermostat name)"
 - "Alexa, make (thermostat name) warmer"
4. Turn DOWN the temperature a set amount:
 - "Alexa, decrease (thermostat name) by (3) degrees"
 - "Alexa, lower (thermostat name) temperature by (3) degrees"
 - "Alexa, decrease (thermostat name) temperature by (3) degrees"
 - "Alexa, cool down (thermostat name) by (3) degrees"
5. Turn DOWN the temperature by 2 degrees:
 - "Alexa, lower (thermostat name) temperature",
 - "Alexa, cool down (thermostat name)"
 - "Alexa, make (thermostat name) colder"
6. Ask for the current temperature
 - "Alexa, what is the temperature of (thermostat name) " Alexa will reply with current temperature.
7. Ask for thermostat setpoints
 - "Alexa, what is the (thermostat name) set to?" Alexa will reply with the current thermostat setpoints and the thermostat mode (heat, cool or auto)